

***microAIR***<sup>®</sup>

***MA50 Series***

***MA50 Alternating Pressure  
Overlay System***

***MA51 Alternating Pressure  
Mattress System***

***MA55 Alternating Pressure  
Low Air Loss Mattress System***

**DEALER:** This manual **MUST** be given to the user of the product.

**USER:** **BEFORE** using this product, read this manual and save for future reference.

For more information regarding  
Invacare products, parts, and services,  
please visit [www.invacare.com](http://www.invacare.com)



***Yes, you can.®***

## **WARNING**

**DO NOT** use this product or any available optional equipment without first completely reading and understanding these instructions and any additional instructional material such as owner's manuals, service manuals or instruction sheets supplied with this product or optional equipment. If you are unable to understand the warnings, cautions or instructions, contact a healthcare professional, dealer or technical personnel before attempting to use this equipment - otherwise, injury or damage may occur.

Procedures other than those described in this manual must be performed by a qualified technician.

---

## **ACCESSORY WARNING**

Only use Invacare accessories on Invacare products.

---

# **SPECIAL NOTES**

Signal words are used in this manual and apply to hazards or unsafe practices which could result in personal injury or property damage. Refer to the table below for definitions of the signal words.

SIGNAL WORD	MEANING
DANGER	Danger indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
WARNING	Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
CAUTION	Caution indicates a potentially hazardous situation which, if not avoided, may result in property damage or minor injury.

---

## **NOTICE**

**THE INFORMATION CONTAINED IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.**

**Check all parts for shipping damage and test before using. In case of damage, DO NOT use. Contact Invacare Customer Service Department for further instruction.**

---

*NOTE: Updated versions of this manual are available on [www.invacare.com](http://www.invacare.com).*

# TABLE OF CONTENTS

<b>SPECIAL NOTES .....</b>	<b>2</b>
<b>REGISTER YOUR PRODUCT .....</b>	<b>4</b>
<b>TYPICAL PRODUCT PARAMETERS .....</b>	<b>5</b>
Electrical Parameters .....	5
Performance Parameters .....	5
Mechanical Parameters.....	5
Environmental Parameters .....	6
<b>LABEL LOCATION .....</b>	<b>7</b>
<b>SECTION 1—GENERAL GUIDELINES .....</b>	<b>8</b>
Contraindications .....	8
Installation .....	8
Entrapment May Occur.....	8
Fire Hazard.....	9
Smoking .....	9
Anesthesia Equipment.....	9
Oxygen .....	9
Electrical .....	9
<b>SECTION 2—OPERATION .....</b>	<b>10</b>
Installing the Mattress.....	10
Overlay System (MA50) .....	10
Mattress Replacement System (MA51 and MA55) .....	11
Installing the Side Rails .....	12
Installing the Power Unit .....	12
Connecting the Hose.....	12
Connecting the Power Cord .....	13
Using the Front Panel .....	14
Power Button.....	14
Static/Alternating Pressure Button .....	15
Adjusting the Minimum Pressure Setting (A/P Low) .....	15
Firm/Soft Buttons.....	16
Fowler Button.....	16
Max Inflate Button .....	16
Mode Button (Max Inflate/Low Air Loss).....	17
Lock Button.....	17
Alarm Silence Button .....	17
Power Fail LED .....	17
Low Pressure LED .....	18
Powering Up the System .....	18
Placing the Patient on the Mattress.....	18
Transferring Patient From/To a Gurney .....	19
Transferring Patient From/To a Wheelchair.....	20
Preparing for CPR Procedure.....	20
About Power Outage and Transportation .....	20

# TABLE OF CONTENTS

<b>SECTION 3—MAINTENANCE AND TROUBLESHOOTING .....</b>	<b>21</b>
Cleaning the System.....	21
Storing the System.....	22
Troubleshooting.....	23
<b>LIMITED WARRANTY .....</b>	<b>24</b>

## REGISTER YOUR PRODUCT

The benefits of registering include:

1. Safeguarding your investment.
2. Ensuring long-term maintenance and servicing of your product.
3. Receiving updates with product information, maintenance tips and industry news.

**Register ONLINE at [warranty.invacare.com](http://warranty.invacare.com)**

Please have your model number and purchase date available to complete your registration.

Any registration information you submit will only be used by Invacare Corporation and protected as required by applicable laws and regulations.

# TYPICAL PRODUCT PARAMETERS

## Electrical Parameters

	MA50/MA51/MA55
<b>INPUT VOLTAGE AC:</b>	90 V
<b>INPUT FREQUENCY:</b>	60 Hz
<b>CURRENT:</b>	1 A
<b>MAXIMUM POWER CONSUMPTION:</b>	5 ± 3 W
<b>CIRCUIT PROTECTION:</b>	Dual fused, 250 V, 1 A fast blow fuses
<b>MODE OF OPERATION:</b>	Continuous

## Performance Parameters

	MA50/MA51/MA55
<b>WEIGHT CAPACITY</b> STANDARD MATTRESS: BARIATRIC MATTRESS: <b>PRESSURE ZONE:</b> <b>MAXIMUM FLOW:</b> <b>MAXIMUM FLOW PRESSURE:</b> <b>MAXIMUM FLOW TIMER:</b> <b>SUPPORT SURFACE INFLATION TIME:</b>	350 lbs 1000 lbs 2 8 ± 4 LPM 35 ± 5 mmHg 45 minutes 20 - 45 minutes
<b>PATIENT COMFORT CONTROL PRESSURES</b> SOFT PRESSURE: FIRM PRESSURE: CYCLE TIME:	8 ± 4 mmHg 32 ± 4 mmHg 5, 10, 15, 20 minutes
<b>PATIENT CONTACT:</b>	Control unit and mattress have Latex-Free components

## Mechanical Parameters

CONTROL UNIT	MA50	MA51	MA55
<b>DIMENSIONS (L X W X H):</b>	9" x 5" x 5"		
<b>WEIGHT:</b>	5 lbs		
<b>POWER CORD:</b>	10 - 14 Feet Long, Hospital Grade		
<b>CONNECTION:</b>	Two ¼" Flow Couplings		Three ¼" Flow Couplings
<b>PACKAGING:</b>	1 piece/box		
<b>AIR FILTER:</b>	None		

## Environmental Parameters

	MA50/MA51/MA55
<b>OPERATING CONDITIONS</b> AMBIENT TEMPERATURE: RELATIVE HUMIDITY: ATMOSPHERIC PRESSURE:	50° - 104° F 30% - 75% Non-Condensing 70 - 106 kPa
<b>STORAGE AND SHIPPING CONDITIONS</b> AMBIENT TEMPERATURE: RELATIVE HUMIDITY: ATMOSPHERIC PRESSURE:	-40° - 158° F 10% - 100% Non-Condensing 50 - 106 kPa

# LABEL LOCATION

**DANGER-EXPLOSION HAZARD: DO NOT** use in the presence of flammable anesthetics.

**CAUTION:** Equipment should be connected to a properly grounded receptacle (3-prong). Risk of Electrical shock. **DO NOT** remove back. Disconnect air hose before administering CPR.

*NOTE: This label is on the back of the unit and also contains the serial number.*



## **⚠ WARNING**

Patient entrapment with bed side rails may cause injury or death. **Mattress MUST** fit bed frame and side rails snugly to prevent patient entrapment. Follow the manufacturer's instructions. Monitor patient frequently. Read and understand the Owner's/Operator's Manual prior to using this equipment. Invacare product manuals are available at [www.invacare.com](http://www.invacare.com) or your dealer.

Label part number 1150708 Rev A

# SECTION I—GENERAL GUIDELINES

---

## **⚠ WARNING**

**SECTION I - GENERAL GUIDELINES** contains important information for the safe operation and use of this product.

---

## **Contraindications**

ALWAYS consult the patient's physician before using the MA50, MA51 and MA55 systems.

## **Installation**

The MA50, MA51 and MA55 systems **MUST** be installed on medical bed frames with side rails. The side rails **MUST** be in the raised position whenever a patient is on the bed.

Controls on the footboard may be obstructed by the power unit on a few bed frames. It may be necessary to relocate the power unit. Refer to Installing the Power Unit on page 12.

Check that air hoses and power cord are clear of moving bed components before placing a patient on the bed. Operate all bed frame motorized functions through their full range of motion to be certain that there is no pulling, interference or pinching.

MA51 AND MA55 ONLY - DO NOT strap the mattress to the bed frame at the head and foot ends. Secure ALL mattress straps. Secure the straps to the bed deck at the head and foot ends and to the frame at the center of the bed. Otherwise damage to the mattress will occur when the head and foot ends are raised. Refer to Installing the Mattress on page 10.

## **Entrapment May Occur**

---

## **⚠ WARNING**

**Patient entrapment with bed side rails may cause injury or death. Mattress **MUST** fit bed frame and side rails snugly to prevent patient entrapment. Follow the manufacturer's instructions. Monitor patient frequently. Read and understand the Owner's/Operator's Manual prior to using this equipment. Invacare product manuals are available at [www.invacare.com](http://www.invacare.com) or your dealer.**

**Proper patient assessment and monitoring, and proper maintenance and use of equipment is required to reduce the risk of entrapment. Variations in bed rail dimensions, and mattress thickness, size or density could increase the risk of entrapment. Visit the FDA website at <http://www.fda.gov> to learn about the risks of entrapment. Review "A Guide to Bed Safety", published by the Hospital Bed Safety Workgroup, located at [www.invacare.com](http://www.invacare.com). Use the link located under each bed rail product entry to access this bed safety guide.**

**Refer to the owner's manuals for beds and rails for additional product and safety information.**

**After any adjustments, repair or service and before use, make sure all attaching hardware is tightened securely. Assist rails with dimensions different from the original equipment supplied or specified by the bed manufacturer may not be interchangeable and may result in entrapment or other injury.**



---

## Fire Hazard

---

### **DANGER**

#### Smoking

**DO NOT SMOKE** while using this device. This system uses room air for circulation through the mattress. A cigarette can burn a hole in the bed surface and cause damage to the mattress. Also, patient clothing, bed sheets, etc. may be combustible and cause a fire. Failure to observe this warning can result in severe fire, property damage and cause physical injury or death.

Smoking by visitors in the room will contaminate the system. Therefore, visitor smoking is **NOT** permitted.

#### Anesthesia Equipment

There is an explosion risk if used with flammable anesthetics.

#### Oxygen

There is a possible fire hazard when used with oxygen administering equipment other than nasal mask or half bed tent type. The oxygen tent should **NOT** extend below mattress support level.

---

## Electrical

---

### **DANGER**

**Electrical shock hazard. DO NOT** remove cover. Refer to qualified service personnel.

---

Before performing any maintenance to the power unit, disconnect the power cord from the wall outlet.

**DO NOT** insert items into any openings of the control unit. Doing so may cause fire or electric shock by shorting the internal components.

The control unit **MUST** be kept away from all heat sources and radiators during operation.

Connect the equipment to properly grounded three prong wall outlet using 10-14 ft hospital grade power cord provided with the product.

Grounding reliability depends upon a properly grounded receptacle (3-prong).

## SECTION 2—OPERATION

---

### CAUTION

The control unit and mattress on the MA50 series are designed to be used as a system. **DO NOT** replace mattresses or control units with other models or other brands. Otherwise, damage to the system may occur. Contact your supplier to get the correct replacement if needed.

---

## Installing the Mattress

### Overlay System (MA50)

*NOTE: For this procedure, refer to FIGURE 2.1.*

*NOTE: The overlay system comes with the following straps - head end elastic strap, foot end elastic strap and two buckle straps.*

1. If necessary, lower the side rails to facilitate installation of the mattress.
2. Place the mattress overlay directly over the existing 3 to 5-inch foam mattress.
3. Loop the head end elastic strap around the head end of the existing foam mattress.
4. Loop the foot end elastic strap around the foot end of the existing foam mattress.
5. Secure the overlay mattress to the existing foam mattress using the two buckle straps.

*NOTE: Ensure that the side rails can move freely.*




**FIGURE 2.1** Installing the Mattress - Overlay System (MA50)

## Mattress Replacement System (MA51 and MA55)

### CAUTION

**DO NOT** strap the mattress to the bed frame at the head and foot ends. Secure **ALL** mattress straps. Secure the straps to the bed deck at the head and foot ends and to the frame at the center of the bed. Otherwise damage to the mattress will occur when the head and foot ends are raised.

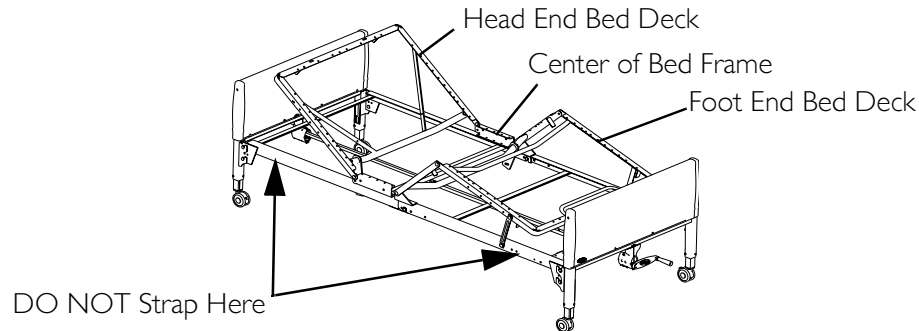


*NOTE: For this procedure, refer to FIGURE 2.2.*

*NOTE: The powered mattress comes with ten nylon buckle straps.*

1. Remove the original foam mattress from the bed.
2. If necessary, lower the side rails to facilitate installation of the mattress.
3. Unroll the powered mattress and place it on the bed frame.

*NOTE: Ensure that the hose is towards the foot end of the bed.*

4. Use the buckle straps to secure the powered mattress to the bed deck in the following locations:
  - Head End - Head End Bed Deck
  - Foot End - Foot End Bed Deck
  - Center - Center of the Bed Frame

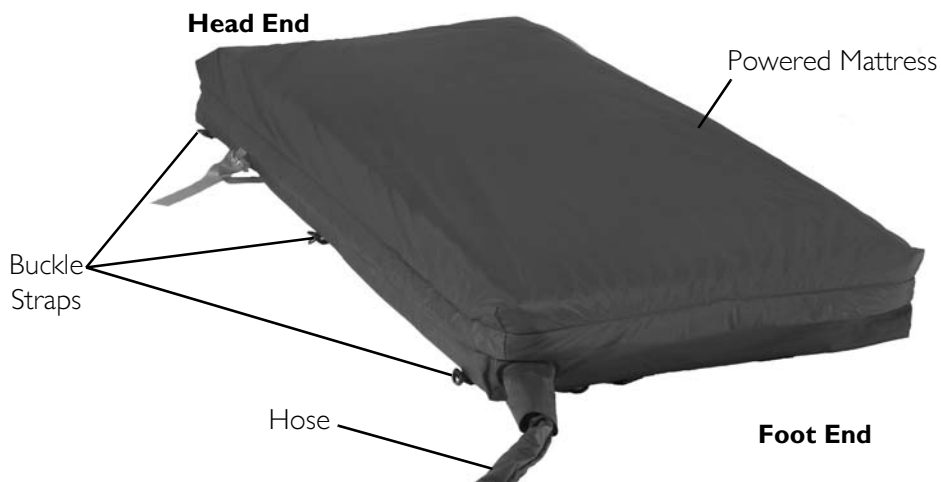

**FIGURE 2.2** Installing the Mattress - Mattress Replacement System (MA51 and MA55)

## Installing the Side Rails

### **⚠ WARNING**

Patient entrapment with bed side rails may cause injury or death. **Mattress MUST fit bed frame and side rails snugly to prevent patient entrapment. Follow the manufacturer's instructions. Monitor patient frequently. Read and understand the Owner's/Operator's Manual prior to using this equipment. Invacare product manuals are available at [www.invacare.com](http://www.invacare.com) or your dealer.**

*NOTE: Refer to the instructions provided with the side rails for the installation procedure.*

## Installing the Power Unit

*NOTE: For this procedure, refer to FIGURE 2.3.*

1. Swing out the bed hooks on the back of the control unit.
2. Place the control unit on the footboard.

*NOTE: If the bed does not have a footboard, place the control unit on a flat surface, leaving room for the hose to hang down.*



**FIGURE 2.3** Installing the Power Unit

## Connecting the Hose


### **CAUTION**

**Ensure that the hose connecting the control unit to the mattress is routed such that it cannot be stepped on, kinked, squeezed or otherwise damaged.**

*NOTE: For this procedure, refer to FIGURE 2.4 on page 13.*

1. Locate the hose at the foot end of the mattress.
2. Locate the control unit connectors on the right side of the control unit.
3. Squeeze and hold the tabs on the hose connectors.
4. Push the hose connectors onto the control connectors until an audible click is heard.

*NOTE: The audible click indicates that the hose connectors are properly engaged with the control connectors.*

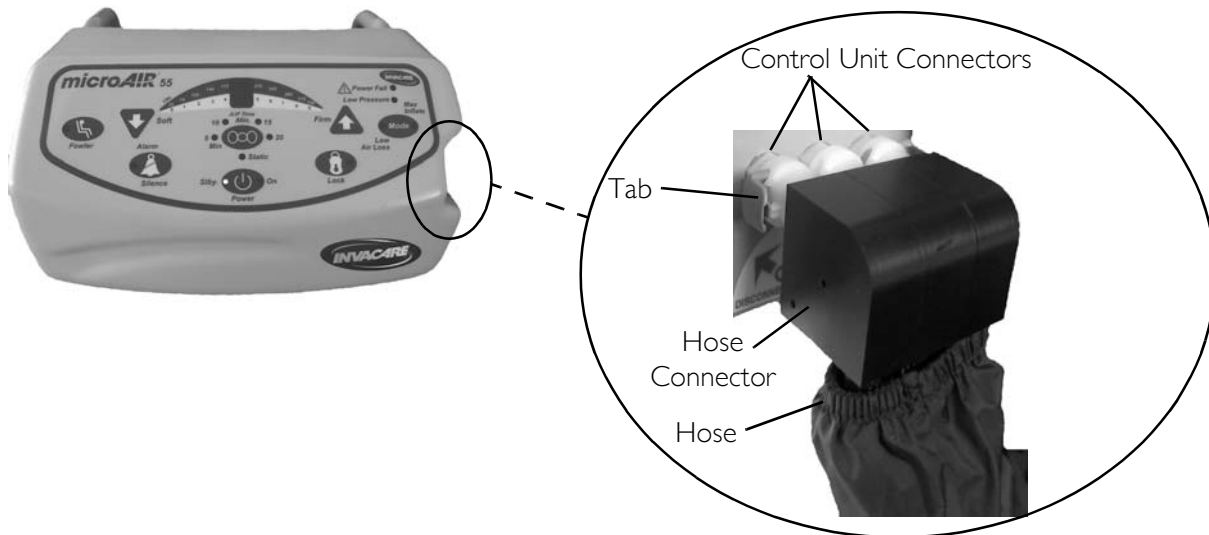

**FIGURE 2.4** Connecting the Hose

## Connecting the Power Cord

### **⚠ WARNING**

**DO NOT** alter plug to fit a non-conforming outlet. Instead, have an electrician install a properly grounded 3-prong outlet. Failure to use the correct plug and outlet can result in a potential safety hazard.

### **CAUTION**



Ensure that the power cord of the control unit is not pinched, or has any objects placed on it, and also ensure it is not located where it can be stepped on or tripped over.

1. Examine the hospital grade power cord supplied with the control unit.
2. Perform one of the following:
  - If the plug is damaged - Call your supplier for a replacement hospital grade cord.
  - If the plug is not damaged - Plug the end of the supplied hospital grade power cord into the power outlet on the side of the control unit.
3. Plug the other end of the plug into a properly grounded outlet on the wall.

*NOTE: Once the unit is plugged in, an AMBER LED on the control unit is lit indicating that the system is in STAND BY mode.*

## Using the Front Panel

NOTE: For this procedure, refer to FIGURE 2.5.

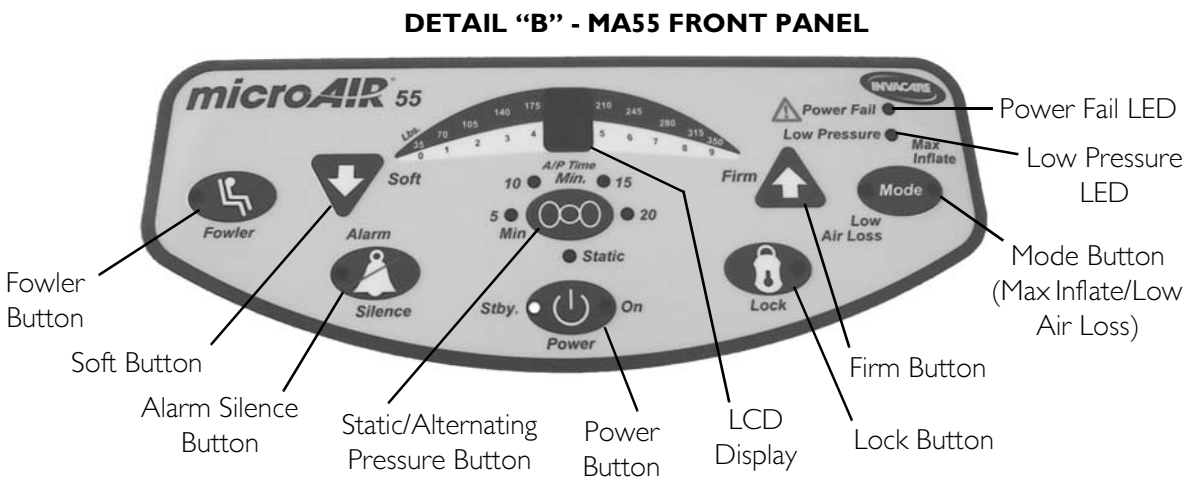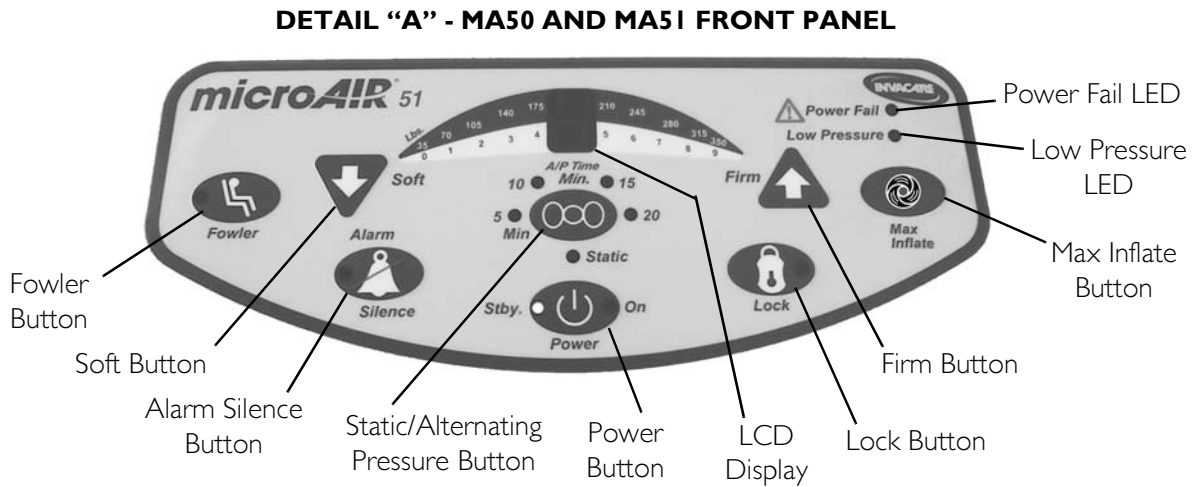

**FIGURE 2.5** Using the Front Panel

### Power Button

1. To turn the control unit on or off, press and release the Power button (  ).

NOTE: Once the unit is plugged in, an AMBER LED on the control unit is lit indicating that the system is in STAND BY mode. Once the Power button is pressed and released, a GREEN LED illuminates indicating that the control unit is on.

NOTE: If the power comes on after a power outage, the control unit will go through its system initialization routine for a few seconds and then resume the desired function.

## Static/Alternating Pressure Button

1. Press the Alternating Pressure button () to select between Static Mode and one of four Alternating Pressure Times.

*NOTE: The alternating pressure times indicate the frequency of deflation or inflation of half of the air cushions (even or odd numbered). For example, 10 minutes is selected. In this example, the even numbered air cushions in the mattress will deflate, while the odd numbered cushions remain at constant pressure. When 10 minutes has elapsed, the even numbered air cushions will inflate while the odd numbered cushions remain at constant pressure. When 10 minutes has elapsed again, the odd numbered air cushions deflate while the even numbered cushions remain at constant pressure. The air cushions continue to inflate or deflate like this as long as an alternating pressure time has been selected. At all times, half of the air cushions remain at a constant pressure when an alternating pressure time has been selected.*



*NOTE: In Static Mode, all air cushions in the mattress are maintained at constant pressure. The Static LED is illuminated GREEN.*

### Adjusting the Minimum Pressure Setting (A/P Low)

The minimum pressure setting during Alternating Pressure is set to 0 (2 mmHg) at the factory. This means that the mattress will deflate as much as possible during the deflation time when using 10, 15 or 20 minute Alternating Pressure times. The setting can be changed so the mattress will only deflate to 50% of the selected pressure setting.

1. Ensure the Standby LED is lit.
2. Perform one of the following:
  - MA50 and MA51 - Press and hold the Max Inflate and Fowler buttons.
  - MA55 - Press and hold the Mode and Fowler buttons.
3. Read the LCD Display. The LCD Display will flash:
  - 0 if the current setting is 0 (2 mmHg).
  - 5 if the current setting is 50% of the selected pressure.
4. Perform one of the following to toggle between the two settings:
  - MA50 and MA51 - Press the Static/Alternating Pressure button.
  - MA55 - Press the Static/Alternating Pressure button.
5. Press the Power button to save the setting.

## Firm/Soft Buttons

1. Select comfort pressure settings by pressing Firm () or Soft () button.
  - Soft Button - Pressing this button reduces the pressure setting in the mattress.
  - Firm Button - Pressing this button increase the pressure setting in the mattress.

*NOTE: The patient comfort pressure ranges from Soft (level 0 =  $6\pm 4$  mmHg) to Firm (level 9 =  $32\pm 6$  mmHg). The Comfort Control LED displays the patient comfort pressure levels from 0 to 9 and provides a guide to the caregiver to set approximate comfort pressure level depending on the patient weight. If the patient's weight to height ratio is above average, increase the pressure setting by approximately 20%.*


## Fowler Button

1. Press the Fowler button () to activate the patient fowler mode.

*NOTE: The Fowler LED illuminates when in this mode. When this mode is activated, the control unit increases the pressure in the mattress to prevent the patient from bottoming out.*

## Max Inflate Button

*NOTE: This button is on the MA50 and MA51 only.*

1. Press the Max Inflate button () to select the Max Inflate mode and inflate the mattress rapidly to maximum firmness (pressurized to  $35 \pm 6$  mmHg). A series of beeps sound every three minutes as a reminder that the Max Inflate mode is active. After 30 minutes, the Max Inflate mode deactivates and the control unit defaults to the previous setting.

*NOTE: It takes 20-45 minutes for the mattress to inflate fully (inflation time depends on size of mattress).*

*NOTE: Max Inflate mode can be manually disengaged by pressing the Max Inflate button. This will deactivate the Max Inflate LED.*

*NOTE: It is recommended that Max Inflate setting be used during patient ingress/egress, patient wound care, patient turning or patient cleaning.*


2. Press the Max Inflate button again to manually disengage Max Inflate mode.

*NOTE: This will deactivate the Max Inflate LED.*



## Mode Button (Max Inflate/Low Air Loss)

*NOTE: The Mode button is on the MA55 system only.*

1. Press the Mode button () to select the Max Inflate mode or the Low Air Loss mode.
  - Max Inflate Mode - In this mode, the mattress inflates rapidly to maximum firmness (pressurized to  $35 \pm 6$  mmHg). A series of beeps sound every three minutes as a reminder that the Max Inflate mode is active. After 45 minutes, the Max Inflate mode deactivates and the control unit defaults to the previous setting.


*NOTE: It takes 20-45 minutes for the mattress to inflate fully (inflation time depends on size of mattress).*

*NOTE: It is recommended that Max Inflate setting be used during patient ingress/egress, patient wound care, patient turning or patient cleaning.*

- Low Air Loss Mode - In this mode, the mattress goes into on-demand low air loss relief mode.
2. Press the Mode button to manually disengage Max Inflate or Low Air Loss mode.

*NOTE: This will deactivate the Max Inflate and Low Air Loss LEDs.*

## Lock Button

1. Press the Lock button () to lock out all control unit functions, including the On button, to prevent any tampering with the settings. Press the button for approximately 3-5 seconds for the Lock LED to activate.

*NOTE: The Lock LED illuminates when in this mode.*

## Alarm Silence Button

1. Press the Alarm Silence button () to silence the alarm that sounds in the event of power failure or when the hose is disconnected from the control unit.

*NOTE: The Alarm LED illuminates when in this mode.*

## Power Fail LED

In the event of power outage, an alarm sounds and Power Fail LED flashes AMBER. The control unit has internal memory and retains the previous settings during the power outage.

*NOTE: During a power outage, the mattress retains the air as long as the mattress is connected to the control unit.*

## Low Pressure LED

In the event that the mattress hose disconnects, an alarm sounds and Low Pressure LED flashes AMBER. Once the low pressure problem is fixed, the control unit resumes operation in the previously set mode.

## Powering Up the System

*NOTE: For this procedure, refer to FIGURE 2.5 on page 14.*

1. Turn on the power to the system by pressing the Power button on the control unit.

*NOTE: Once the button is released, a GREEN LED illuminates when the unit is on.*

## Placing the Patient on the Mattress

1. Perform one of the following:
  - MA50 or MA51 - Press the Max Inflate button to turn on the control unit to maximum flow.
  - MA55 - Press the Mode button to select Max Inflate Mode.
2. After the mattress is fully inflated, place the patient on the mattress.
3. Ensure that the patient's feet are towards the foot end of the mattress (the end with the hose).
4. Center the patient on the bed from side-to-side and head-to-foot.

*NOTE: Special positioning may be required with contracted patients to provide comfortable positions.*

5. After placing the patient, make certain no objects will fall under the patient, such as feeding tubes, IV's etc.
6. Wait five minutes for the mattress pressure to stabilize.
7. Once the mattress inflates to its normal size, set the comfort pressure to the desired comfort level.
8. Wait five minutes for the mattress pressure to stabilize.

9. Verify that the patient has not bottomed out by performing the following steps:
  - A. Ensure that the patient is lying flat on his/her back in the middle of the mattress.
  - B. Place four fingers between the air cushions directly underneath the sacral region of the patient's body.
  - C. Ensure that there is 3 to 4-finger width clearance between the bottom of the patient and the bed frame.
  - D. Adjust the comfort setting, if needed.
  - E. Wait five minutes for the mattress pressure to stabilize.
  - F. Repeat STEPS A-E until patient has not bottomed out and patient comfort is achieved.
10. If the patient feels that the bed is too soft/hard, press the Soft or Firm button to adjust the comfort settings.
11. Use a regular pillow to help support and stabilize the patient's head.

## Transferring Patient From/To a Gurney

---

### **⚠ WARNING**

**ALWAYS engage the wheel locks of the bed and the wheel locks of the gurney before transferring the patient between the bed and the gurney.**

---

1. Engage the wheel locks of the bed. Refer to the owner's manual provided with the bed.
2. Engage the wheel locks of the gurney. Refer to the owner's manual provided with the gurney.
3. Press the Max Inflate or Mode button to achieve maximum mattress pressure.
4. Raise or lower the bed to match the gurney height. Refer to the owner's manual provided with the bed.
5. When the mattress has reached maximum firmness, perform one of the following:
  - Bed to Gurney Transfer - Slide the patient onto the gurney.
  - Gurney to Bed Transfer - Slide the patient onto the bed.

## Transferring Patient From/To a Wheelchair

### **⚠ WARNING**


**ALWAYS engage the wheel locks of the bed and the wheel locks of the wheelchair before transferring the patient between the bed and the wheelchair.**

1. Engage the wheel locks of the bed. Refer to the owner's manual provided with the bed.
2. Engage the wheel locks of the wheelchair, if applicable. Refer to the owner's manual provided with the wheelchair.
3. Press the Max Inflate or Mode button to achieve maximum mattress pressure.
4. Raise or lower the bed to match the wheelchair height. Refer to the owner's manual provided with the bed.
5. When the mattress has reached maximum firmness, perform one of the following:
  - Bed to Wheelchair Transfer - Slide the patient onto the wheelchair.
  - Wheelchair to Bed Transfer - Slide the patient onto the bed.

## Preparing for CPR Procedure

*NOTE: For this procedure, refer to FIGURE 2.6.*

1. Press and hold the tabs on hose connector while pulling the hose from the control unit.
2. Disconnect the RED CPR connector located on the side of the mattress.

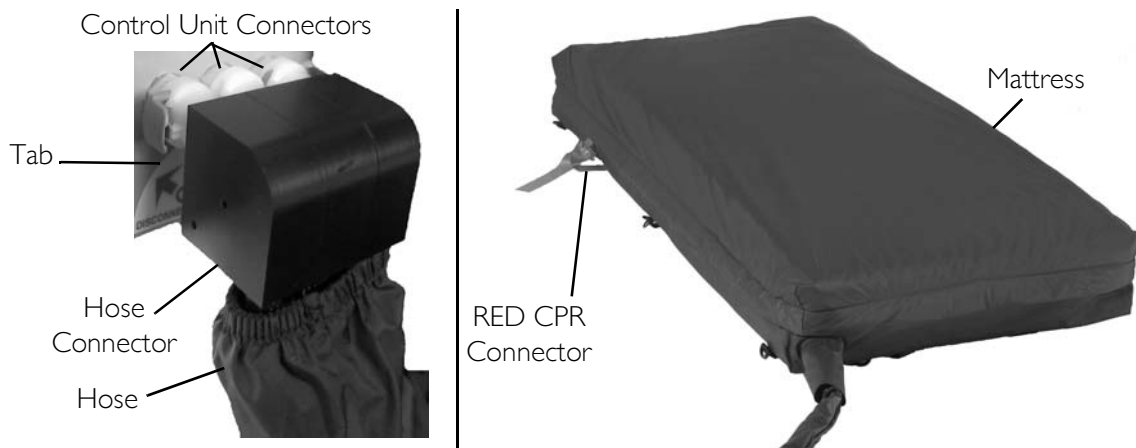

**FIGURE 2.6** Preparing for CPR Procedure

## About Power Outage and Transportation

If the hoses remain connected to the control unit, the mattress retains air during a power outage, during transportation, when the control unit is unplugged or when the control unit is turned Off. If the hose becomes disconnected or damaged and the mattress deflates, the mattress has a 2-inch foam pad to provide patient support .

# SECTION 3—MAINTENANCE AND TROUBLESHOOTING

## Cleaning the System

---

### **⚠ WARNING**

**Before cleaning or disassembling the MA50 series, check the underside of the mattress folds for sharp objects such as scissors, needles, etc. These objects should be removed and discarded before proceeding with further cleaning or disassembly; otherwise injury or damage to the product may occur.**

**Because of potential risk of infectious exposure, cleaning with the patient on the bed is not recommended.**

**All equipment should be inspected. Any item that is visibly soiled with the patient's blood or other body fluids should be properly cleaned or removed.**

**Laundry workers should treat all soiled bedding as if it were contaminated with pathogenic microorganisms.**

---

1. Remove the bedding.
  2. If necessary, inflate the mattress.
  3. Ensure that the control unit is off.
  4. Unplug the power cord from the wall outlet.
  5. Ensure that the underside of the mattress is clear of all sharp objects.
  6. Examine the surface of the control unit and mattress assembly components for visible blood or body fluids.
  7. Perform one of the following:
    - If blood is present, decontaminate the product.
      - i. Remove all visible soil with disposable paper towels.
      - ii. Scrub the area with freshly prepared effective phenolic detergent disinfectant solution.
    - If blood is not present, remove any soil from the cover with paper towels.
- NOTE: If soiled, the cover should be removed, cleaned and decontaminated.*
8. Perform the following steps to clean the mattress cover:
    - A. Using a clean sponge or paper towel, wipe down the cover surface with a dilute detergent solution of quaternary cleaner disinfectant or other germicidal detergent solution.
    - B. Remove the cover and launder it using the following method:

## **CAUTION**

**Laundry workers should always wash their hands before working with clean bedding.**

**DO NOT overload the machine.**

**DO NOT use chlorine bleach because it may damage the fabric coating.**

**High air temperatures will damage the fabrics and void the Invacare warranty.**

---

- i. Place the cover in a washing machine.
  - ii. Wash with warm water (below 120°F).
  - iii. Add detergent and disinfectant according to the manufacturer's instructions.
  - iv. Remove excess water.
  - v. Set the dryer to the lowest setting (below 120°F).
  - vi. Dry the cover until it is completely dry.
9. Perform the following steps to clean the control unit and hose fittings:
- A. Wipe all controls, chassis and hose fittings with a quaternary disinfectant solution.
  - B. Using a nylon brush, gently clean all crevices as they can harbor microorganisms.
  - C. Air dry all treated surfaces.
10. Perform the following steps to clean the mattress components (air cushions, mattress base, etc.):
- A. Using a clean sponge or paper towel, wipe down the mattress components with a dilute detergent solution of quaternary cleaner disinfectant or other germicidal detergent solution.
  - B. Wipe the mattress components with a clean dry cloth.

## **Storing the System**

1. Ensure that the control unit is off and disconnect the power cord from the wall outlet.
2. Clean the system. Refer to Cleaning the System on page 21.
3. Disconnect the air hose connector(s) from the control unit and allow air to vent from the mattress.
4. Gently roll up the mattress with minimal handling and agitation.
5. Ensure the cover surface is inside the roll.
6. Store the unit, keeping the mattress with the control unit.

## Troubleshooting

PROBLEM	CAUSE	SOLUTION
Mattress not inflating Not alternating properly	Mattress hose disconnected	Connect hose connectors and lock them in place
	Air hose kinked or split	Unkink hose or replace split hose
	Major leak in the air cushions or overlay pad	Replace leaking air cushions or overlay pad
	Kinked or split manifold	Unkink manifold or replace split manifold
	Has power and fuse is good, control unit does not come on	Send control unit back to factory for repair
	Not alternating, solenoid malfunction	Send control unit back to factory for repair
	No air, pump malfunction	Send unit for repair
No power	Control unit off	Check power source and turn on unit
	Power cord disconnected	Connect power cord to the power source
	No power in the power source	Check power source has power and turn it On
	Power outage	Wait till the power source has power
	Blown fuse	Replace blown fuse with an equivalent fuse

---

# LIMITED WARRANTY

**PLEASE NOTE: THE WARRANTY BELOW HAS BEEN DRAFTED TO COMPLY WITH FEDERAL LAW APPLICABLE TO PRODUCTS MANUFACTURED AFTER JULY 4, 1975.**

This warranty is extended only to the original purchaser who purchases this product when new and unused from Invacare or a dealer. This warranty is not extended to any other person or entity and is not transferable or assignable to any subsequent purchaser or owner. Coverage under this warranty will end upon any such subsequent sale or other transfer of title to any other person.

This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

Invacare warrants the mattress, mattress overlay and cover when purchased new and unused to be free from defects in materials and workmanship for a period of one year from the date of purchase from Invacare or a dealer, with a copy of the seller's invoice required for coverage under this warranty. Invacare warrants the control unit when purchased new and unused to be free from defects in materials and workmanship for a period of two years from the date of purchase from Invacare or a dealer, with a copy of the seller's invoice required for coverage under this warranty. If within such warranty period any such product shall be proven to be defective, such product shall be repaired or replaced, at Invacare's option. This warranty does not include any labor or shipping charges incurred in replacement part installation or repair of any such product. Invacare's sole obligation and your exclusive remedy under this warranty shall be limited to such repair and/or replacement.

For warranty service, please contact the dealer from whom you purchased your Invacare product. In the event you do not receive satisfactory warranty service, please write directly to Invacare at the address on the back cover. Provide dealer's name, address, model number, and the date of purchase, indicate nature of the defect and, if the product is serialized, indicate the serial number.

Invacare Corporation will issue a return authorization. The defective unit or parts must be returned for warranty inspection using the serial number, when applicable, as identification within thirty days of return authorization date. **DO NOT** return products to our factory without our prior consent. C.O.D. shipments will be refused; please prepay shipping charges.

**LIMITATIONS AND EXCLUSIONS: THE WARRANTY SHALL NOT APPLY TO PROBLEMS ARISING FROM NORMAL WEAR OR FAILURE TO ADHERE TO THE ENCLOSED INSTRUCTIONS. IN ADDITION, THE FOREGOING WARRANTY SHALL NOT APPLY TO SERIAL NUMBERED PRODUCTS IF THE SERIAL NUMBER HAS BEEN REMOVED OR DEFACED; PRODUCTS SUBJECTED TO NEGLIGENCE, ACCIDENT, IMPROPER OPERATION, MAINTENANCE OR STORAGE; OR PRODUCTS MODIFIED WITHOUT INVACARE'S EXPRESS WRITTEN CONSENT INCLUDING, BUT NOT LIMITED TO: MODIFICATION THROUGH THE USE OF UNAUTHORIZED PARTS OR ATTACHMENTS; PRODUCTS DAMAGED BY REASON OF REPAIRS MADE TO ANY COMPONENT WITHOUT THE SPECIFIC CONSENT OF INVACARE; PRODUCTS DAMAGED BY CIRCUMSTANCES BEYOND INVACARE'S CONTROL; PRODUCTS REPAIRED BY ANYONE OTHER THAN AN INVACARE DEALER, SUCH EVALUATION SHALL BE SOLELY DETERMINED BY INVACARE.**

**THE FOREGOING EXPRESS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS WARRANTIES WHATSOEVER, WHETHER EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND THE SOLE REMEDY FOR VIOLATIONS OF ANY WARRANTY WHATSOEVER, SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT PURSUANT TO THE TERMS CONTAINED HEREIN. THE APPLICATION OF ANY IMPLIED WARRANTY WHATSOEVER SHALL NOT EXTEND BEYOND THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN. INVACARE SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER.**

**THIS WARRANTY SHALL BE EXTENDED TO COMPLY WITH STATE/PROVINCIAL LAWS AND REQUIREMENTS.**

Invacare Corporation [www.invacare.com](http://www.invacare.com)



**Yes, you can.®**

**USA**  
One Invacare Way  
Elyria, Ohio USA  
44036-2125  
800-333-6900

**Canada**  
570 Matheson Blvd E  
Unit 8  
Mississauga Ontario  
L4Z 4G4 Canada  
800-668-5324

All rights reserved. Trademarks are identified by the symbols ™ and ®. All trademarks are owned by or licensed to Invacare Corporation unless otherwise noted.

© 2008 Invacare Corporation

Part No 1148136

Rev B - 02/08